



SEE THE DETAIL AT RIGHT FOR
GUTTER ASSEMBLY PART NUMBERS

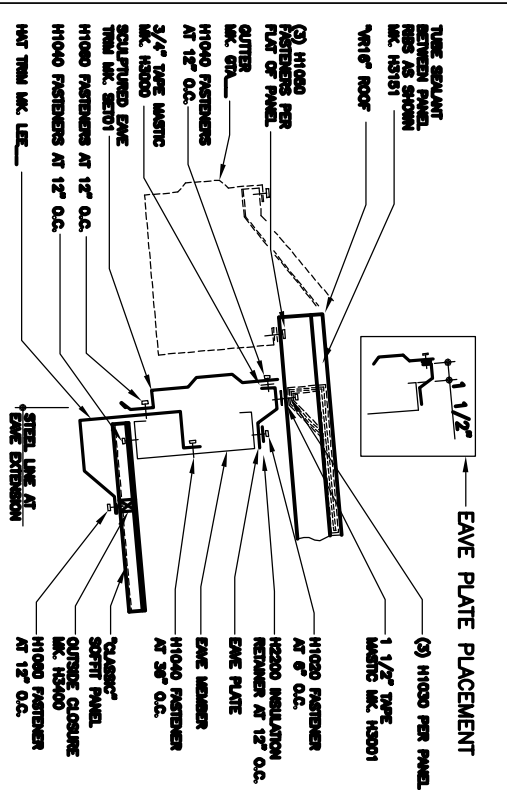

AT EAVE EXTENSION STEEL LINE

NOTE: THE GUTTER BRACKET IS PLACED UNDER
THE LIP OF THE GUTTER AS SHOWN BELOW

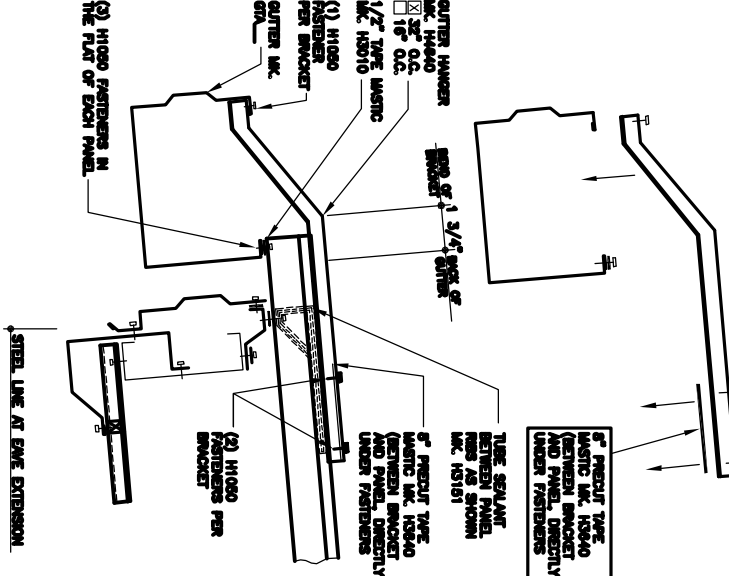


ENLARGED DETAIL AT GUTTER

- 1) SEE THE DETAIL ABOVE FOR EAVE
EXTENSION TRIM PART NUMBERS.
- 2) SEE THE DETAIL ABOVE RIGHT FOR
GUTTER ASSEMBLY PART NUMBERS.
- 3) SEE DETAIL AT RIGHT FOR TRIM PART
NUMBERS AT THE BUILDING STEEL LINE.


STANDARD EAVE EXTENSION

SEE WALL SHEETING ERECTION NOTES FOR WALL PANEL FASTENER LOCATIONS
FIELD CUT WALL PANEL AROUND EXTENSION BEAM

5
D11

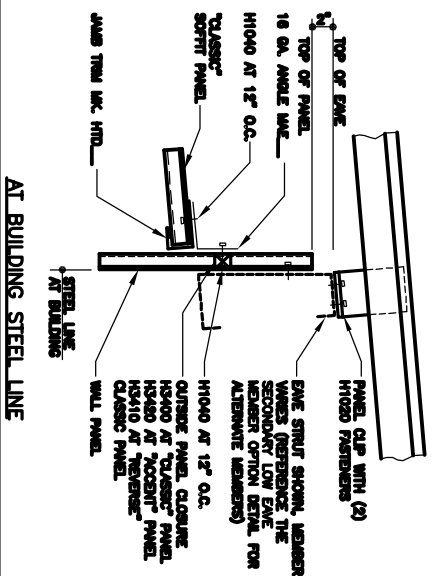


AT BUILDING STEEL LINE

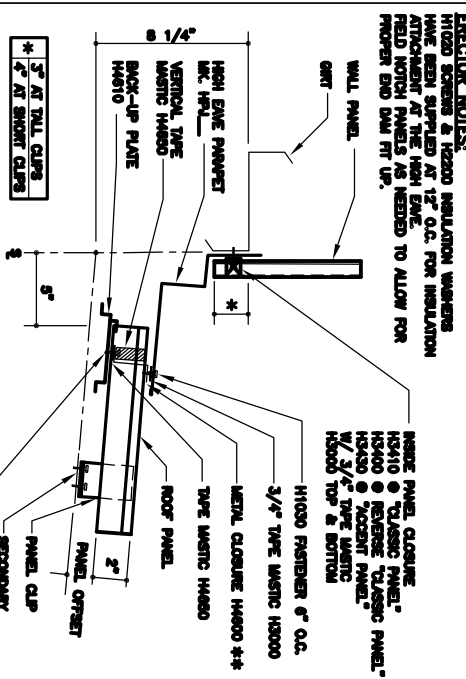

HIGH EAVE PARAPET DETAIL

SEE WALL SHEETING ERECTION NOTES FOR WALL PANEL FASTENER LOCATIONS


9
D11

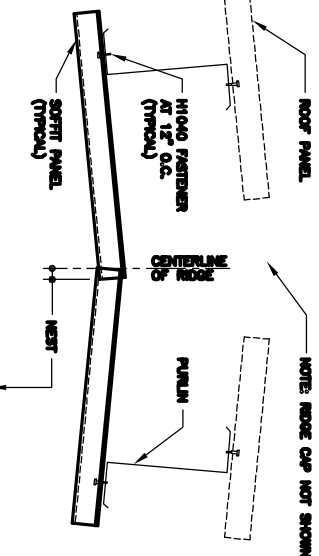


RIDGE SOFFIT PANEL DETAIL

SEE WALL SHEETING ERECTION NOTES FOR WALL PANEL FASTENER LOCATIONS


10
D11

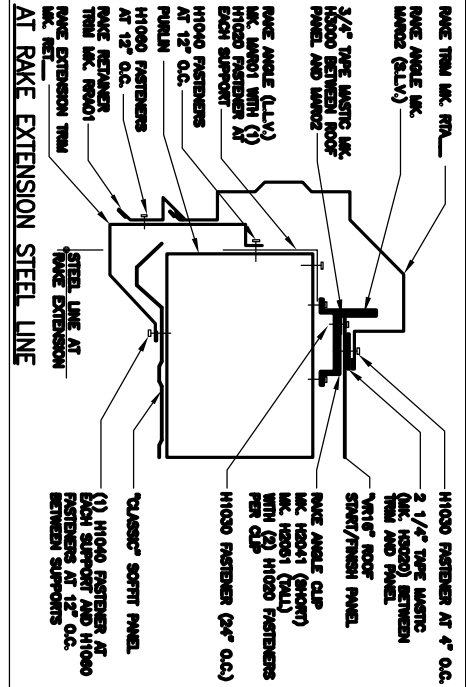


AT RAKE EXTENSION STEEL LINE

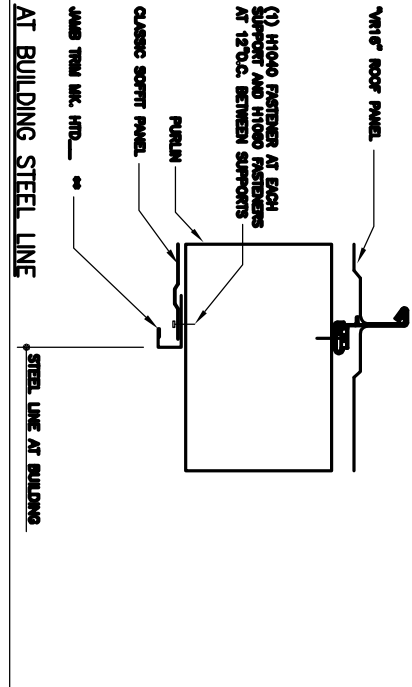


AT BUILDING STEEL LINE

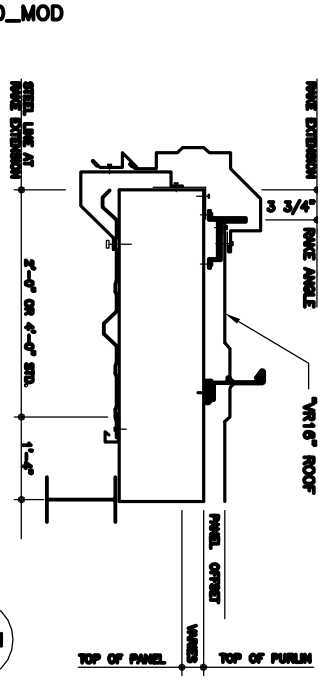


7
D11

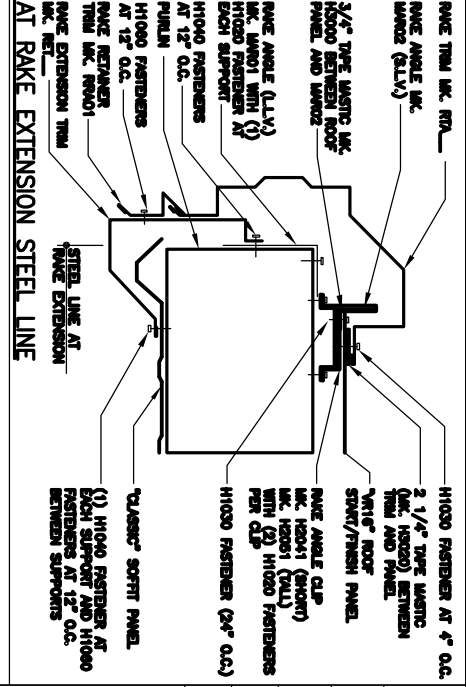

AT RAKE EXTENSION STEEL LINE

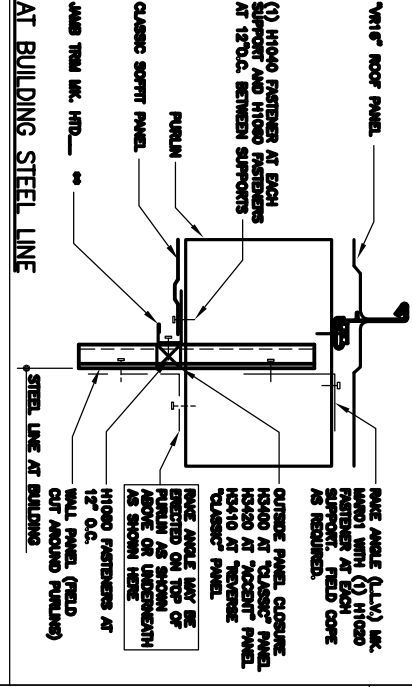

AT BUILDING STEEL LINE

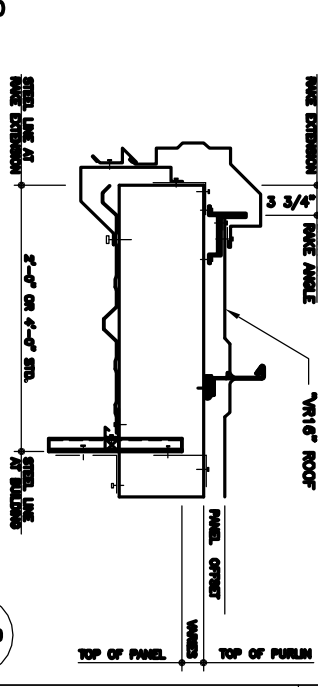

8
D11